SONY

VGN-FSxx series Disassemble Instruction

Table of contents

Section	Title	Page
1	**Disassembly Procedures Outline**	
	Fixture for disassembly	2
	Disassembly procedure flow chart	3
2	**Disassembly components**	
	Disassembly battery	5
	Disassembly RAM	5
	Disassembly HDD	6
	Disassembly keyboard	7
	Disassembly K/B cover	7
	Disassembly LCD ASSY	9
	Disassembly Bottom	10
	Disassembly ODD	10
	Disassembly ASSY Thermal CPU	11
	Disassembly CPU	11
	Disassembly Thermal VGA	12
	Disassembly W-LAN moudle	12
	Disassembly PWA-ANTENNA	12
	Disassembly Motherboard	13

Fixture needed for Disassembly

Station	Wrench power	Screw model	Amount
CPU FAN	1.8±0.2kgf.cm	M2*L5	4
DC-IN BRACKET	1.8±0.2kgf.cm	M2*L5	1
VGA	1.8±0.2kgf.cm	M2*L5	4
ODD	1.8±0.2kgf.cm	M2*L5	3
Antenna board	1.8±0.2kgf.cm	M2*L5	1
LCD Bezel	2.5±0.2kgf.cm	M2*L5	10
BOTTOM	1.8±0.2kgf.cm	M2*L7	13
LCD	4.0±0.2kgf.cm	M3*L6	4
K/B	1.8±0.2kgf.cm	M2*L3	4
HDD	1.8±0.2kgf.cm	M2*L7	4
HDD&RAM DOOR	1.8±0.2kgf.cm	M2*L7	2

SONY

VGN-FSxx series Disassemble

FLOW CHART

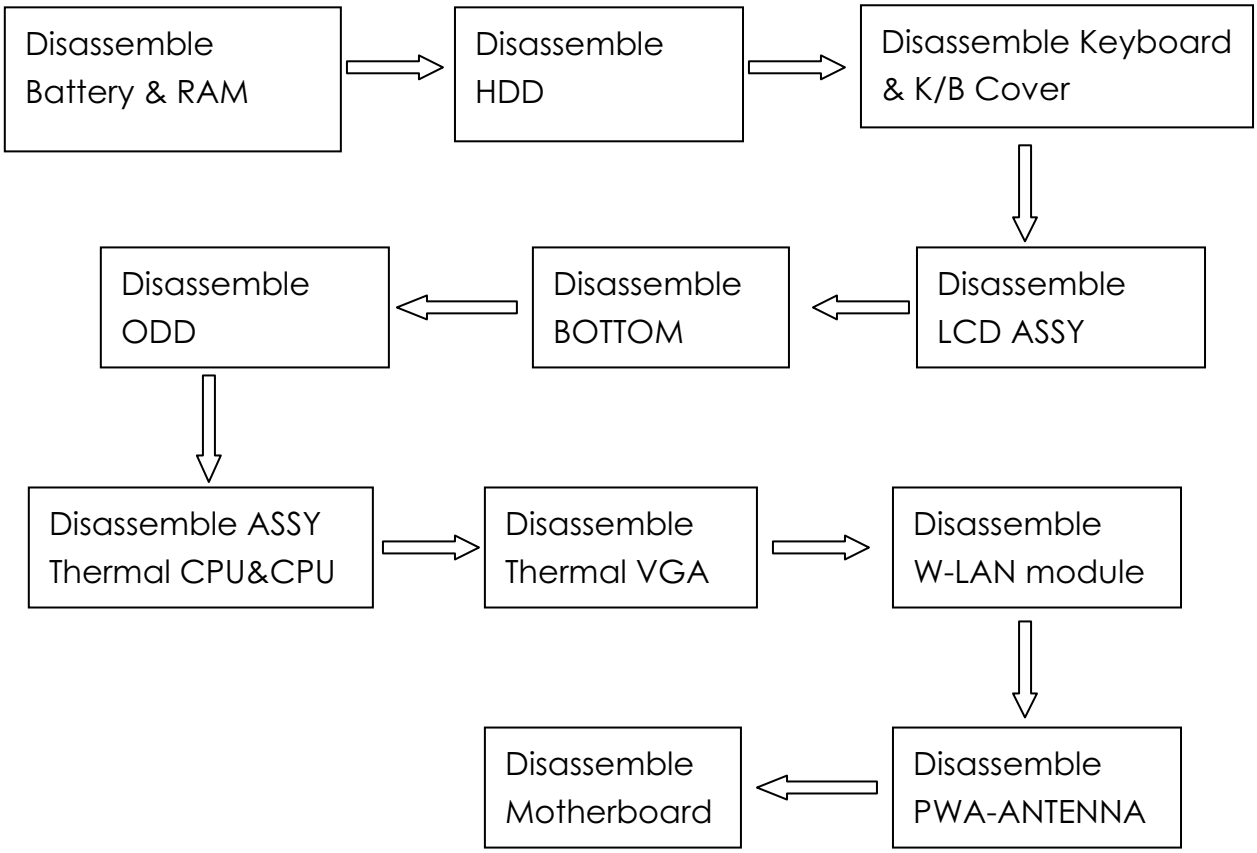

SONY

VGN-FSxx series Disassemble instructions

1. Remove the battery
2. Disassemble the RAM door and RAM

Step 1.To prevent any kind of cosmetic damages and scratches; place your PC upside down on top of a soft surface. Remove the battery in the direction of the arrow and set aside.

Step 2. Using a screwdriver, remove the marked screw.

Step 3. Remove memory access door in the direction of the arrow and set aside.

Step 4. Unlock the memory socket remove it in the direction of the arrow and set aside.